LE FORBAN



USER GUIDE

You are the proud owner of the "Omaha" Chronograph and we thank you for your purchase!

These instructions will help you to fully enjoy your new automatic watch.



Never forget to <u>completely screw</u> <u>down the crown</u> after setting the time in order to maintain the watch's water resistance.

After any contact with salt water it is advisable to rinse your watch in clear water and dry it with a soft cloth.

Avoid wearing your watch in the shower.

Our watches cannot replace professional scuba diving measuring instruments.

HAND-WINDING



Your watch is automatic and winds itself thanks to the movements of your wrist. However, it is sometimes necessary to wind it manually if you haven't used it for a while.

Fully unscrew the crown (turning anti-clockwise) then turn it about 20 times in a clockwise direction to wind the movement.

SETTING THE TIME



Fully unscrew the crown. Pull it out two clicks, then turn it to set the time.

The 3 O'clock counter shows the seconds.

After setting the time, do not forget to screw down the crown in order to maintain the watch's water resistance.

CHRONOGRAPH FUNCTIONS



Press **pusher 1** to start the chronograph. Press again to stop the chronograph.

The center chronograph second hand displays the elapsed seconds while the 9 O'clock counter shows the elapsed minutes (maximum 30 minutes).

Press pusher 2 to reset the chronograph.

ROTATING BEZEL



Your watch is fitted with an unidirectional rotating bezel. The bezel is designed to only turn anti-clockwise.

Place the mark (small dot) on the departure time (to calculate a duration) or on the arrival time (to respect a time).